

## Dear Customer

Thanks for purchasing an Xelaris Brushless ESC Please read this manual carefully.

In that we have no control over the correct use, installation, application, or maintenance of our products, no liability shall be assumed nor accepted for any damages, losses or costs resulting From the use of the product. Any claims arising from the operating, failure or malfunctioning etc. will be denied. We assume no liability for personal injury, property damage or consequential damages resulting from our product or our workmanship.

## Features

- High performance microprocessor brings out the best compatibility with all kinds of motors and the highest driving efficiency.
- Maximum motor speed: 210000 RPM (2 poles), 70000 RPM (6 poles), 35000 RPM (12 poles).
- 3 start modes: Normal / Soft / Very-Soft, compatible with fixed-wing aircraft and helicopter.
- Throttle range can be configured to be compatible with all transmitters currently available on market.
- Smooth, linear, quick and precise throttle response.
- Separate voltage regulator IC for microprocessor to get a better anti-jamming capability.
- Multiple protection features: Low-voltage cut-off protection / over-heat protection / throttle signal loss protection.
- The output of the built-in BEC is switchable by user programming (5.25V or 6.0V).

## Specifications Xelaris Brushless ESC:

Type:	Xelaris 100A Brushless ESC	Xelaris 80A Brushless ESC
Continous Current:	100A	80A
Burst:	150A	120A
BEC <sup>1)</sup> :	Switch	Switch
BEC Output:	5.25V / 6.0V	5.25V / 6.0V
Programming:	Transmitter	Transmitter
Cells:	LiPo / Li-Ion: 2-6 Cells NiMH / NiCd 5-18 Cells	LiPo / Li-Ion 2-6 Cells NiMH / NiCd 5-18 Cells
Weight:	82g	82g
Size:	70x34x16	70x34x16


<sup>1)</sup> BEC means "Battery Elimination Circuit". It is a DC-DC voltage regulator to supply the receiver and other equipments from the main battery pack. With the build-in BEC of an ESC, the receiver needn't to be supplied with an additional battery pack.



## SAFETY NOTICE INTERNAL BEC:

For safety reason a 4 Cell NiCD/NiMH Battery or a external BEC (Art. Nr. 01.1446) must be installed on the receiver!

## Wiring Diagram

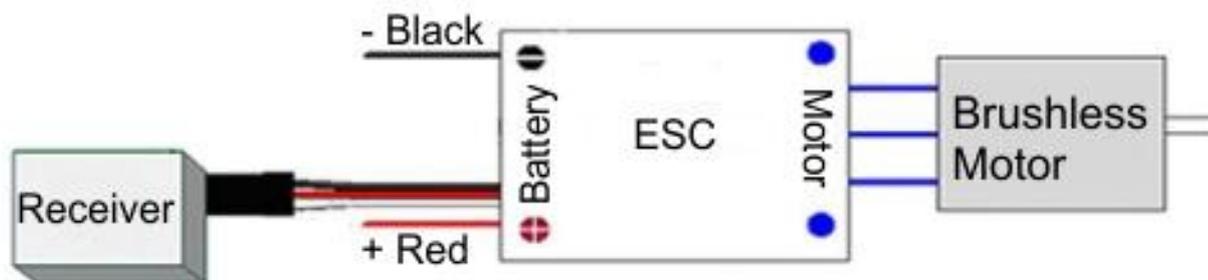

## Programmable Items

1. **Brake Setting:** Off / Soft / Hard / Very Hard, default is Off
2. **Battery Type:** Lithium (Lipo or Li-ion) / NiMH, default is Lithium
3. **Low Voltage Protection Mode (CutOff Mode):** Soft Cut (Gradually reduce the output power) / Hard Cut (Immediately stop the output power). Default is Soft Cut
4. **Low Voltage Protection Threshold (Cutoff Threshold):** Low / Middle / High / Custom, default is Middle  
For lithium batteries, the cutoff threshold of the whole battery pack is calculated according to the cells number.  
Low: 2.85V per Cell  
Middle: 3.15V per Cell  
High: 3.30V per Cell

For NiMH and NiCd batteries, the cutoff threshold of the whole battery pack is calculated as follows:

Low : 50% of the battery's battery's full charged voltage  
Middle: 62.5% of the battery's full charged voltage  
High: 75% of the battery's full charged voltage

5. **Start Mode:** Normal / Soft / Very-Soft, default is Normal

"Normal" is preferred for fixed-wing aircraft. "Soft" or "Very-Soft" are preferred for helicopters. The initial acceleration of the "Soft" and "Very-Soft" modes are slower than "Normal" mode, usually it takes 3 second for "Soft" mode or 8 seconds for "Very-Soft" mode from 0% throttle advance to full throttle. After startup, if the throttle is closed (throttle stick is moved to the bottom position) and opened again (throttle stick is moved upwards) within 3 seconds, the restart will be temporarily changed to "Normal" mode to get rid of the

chances of a crash caused by slow throttle response. This special design is useful for aerobatic flight.

6. **Timing:** 0° / 3.75° / 7.5° / 11.25° / **15°** / 18.75° / 22.5° / 26.25°, default is 15° <sup>2)</sup>  
Usually, low timing value is suitable for most motors. But there are many differences among structures and parameters of different motors so please try and select the most suitable timing value according to the motor you are just using. The correct timing value makes the motor run smoothly. And generally, higher timing value brings out higher output power and higher speed.  
<sup>2)</sup> After changing the timing setting, please test your RC model on ground prior to flight!
7. **Reserved for future**
8. **Reserved for future**
9. **PWM Frequency: 12KHz** / 8KHz, default is 12KHz  
For some motors with high KV (high speed) and many poles, the 12KHz PWM frequency may let them work more smoothly. But the higher PWM frequency will make the ESC hotter. Generally, the 8KHz PWM frequency is suitable for most motors.
10. **BEC Output: 5.25V / 6V**, default is 6V
11. **Reserved for future.**
12. **Lipo Cells: Auto** / 2S / 3S / 4S / 5S / 6S, the default is Auto <sup>3)</sup>  
This programmable item is available for lithium battery. In the startup process, the motor will emit several "Beep-" tones to represent the Lipo cells number, it is helpful for you to check whether it is coincident with the actual battery pack or not.  
<sup>3)</sup> If you choose "Auto", the ESC may mistakenly judge the battery cells when the voltage is less than 3.7V/Cell, **so we strongly suggest setting the "Lipo Cells" manually.**

### Begin To Use The New ESC

Please check the wiring and connections carefully, and then start the ESC in the following sequences:

1. Move the throttle stick to the bottom position and then switch on the transmitter.
2. Connect the battery pack to the ESC, the ESC begins the self-test process, a special tone "♪ 123" is emitted, which means the voltage of the battery pack is in normal range, and then N "Beep" tones will be emitted, means the number of lipo battery cells. Finally a long "Beep—" tone will be emitted, which means the self-test is OK, the aircraft or helicopter is ready to go flying.
  - If nothing is happened, please check the battery pack and all the connections;
  - If a special tone "♪ 56712" is emitted after 2 Beep tones ("Beep-Beep-"), means the ESC has entered the program mode, it is because the throttle channel of your transmitter is reversed, please set it correctly;
  - If the red LED flashes very quickly (2 times per second), means the input voltage is too low or too high, please check your battery's voltage.
3. **VERY IMPORTANT!** Because different transmitter has different throttle range, you need to calibrate the throttle range. Please read the instruction "Throttle Range Setting".  
After correctly setting the throttle range, the red LED lights when the throttle stick is moved to the top position (Maximum throttle).

### Alert Tone

1. Input voltage is abnormal: The ESC begins to check the voltage when the battery pack is connected, if the voltage is not in the acceptable range, such an alert tone will be emitted: "Beep-Beep-, Beep-Beep-" (Every "Beep-Beep-" has a time interval of about 1 second), and at the same time, the red LED also flashes.
2. Throttle signal is lost: When the ESC can't detect the normal throttle signal, such an alert tone will be emitted: "Beep-, Beep-, Beep-". (Every "Beep-" has a time interval of about 2 seconds)
3. Throttle stick is not in the bottom position: When the throttle stick is not in the bottom (lowest) position, a very rapid alert tone will be emitted: "Beep-, Beep-, Beep-". (Every "Beep-" has a time interval of about 0.25 second.)

### Protection Function

1. Abnormal startup protection: If the motor fails to start within 2 seconds of throttle application, the ESC will cut-off the output power. In this case, the throttle stick **MUST** be moved to the bottom position again to restart the motor. (This happens in the following cases: The connection between ESC and motor is not reliable, the propeller or the motor is blocked, the gearbox is damaged, etc.)
2. Over-heat protection: When the temperature of the ESC is too high, the ESC will reduce the output power.
3. Throttle signal loss protection: The ESC will cutoff the output power if throttle signal is lost for more than 0.25 second, the output power will be resumed as soon as the throttle signal is normal again.

### Trouble Shooting

Trouble	Possible Reason	Action
After power on, motor does not work, no sound is emitted	The connection between battery pack and ESC is not correct	Check the power connection. Replace the connector with new one
After power on, motor does not work, such an alert tone is emitted and the red LED flashes at the same time. "Beep-Beep-, Beep-Beep-" (Every "Beep-Beep-" has a time interval of about 1 second)	Input voltage is abnormal, too high or too low.	Check the voltage of battery pack
After power on, motor does not work, such an alert tone is emitted: "Beep-, Beep-, Beep-" (Every "Beep-" has a time interval of about 2 seconds)	Throttle signal is irregular or lost	Check the receiver and transmitter Check the control cable of the ESC
After power on, motor does not work, such an alert tone is emitted: "Beep-, Beep-, Beep-" (Every "Beep-" has a time interval of about 0.25 second)	The throttle stick is not in the bottom (lowest) position	Move the throttle stick to bottom position
After power on, motor does not work, a special tone "♪56712" is emitted after 2 "Beep" tones (Beep-Beep-)	Direction of the throttle channel is reversed, so the ESC has entered the program mode	Set the direction of throttle channel correctly (Please refer to the user manual of your transmitter)
The motor runs in the opposite direction	The connection between ESC and the motor need to be changed.	Swap any two wire connections between ESC and motor
The motor stop running while in working state	Throttle signal is lost	Check the receiver and transmitter Check the control cable of throttle channel
	ESC has entered Low Voltage Protection mode	Land RC model as soon as possible, and replace the battery pack
	Some connections are not reliable	Check all the connections: battery pack connection, throttle signal cable, motor connections, etc.

### Normal Startup Procedure

Move the throttle stick to bottom position and then switch on your transmitter	Connect the battery pack to the ESC, a special tone "♪123" emits, that means the battery supply is OK	Several "Beep-" tones emits to represent the number of lipo battery cells	As soon as the self-test process is finished, a long "Beep—" tone will be emitted	Move the throttle stick upwards to go flying now
--	---	---	---	--

### Throttle Range Setting

Switch on the transmitter, and then move the throttle stick to top position	Connect battery pack to the ESC, a special tone "♪123" emits, that means the battery supply is OK, then wait for 2 seconds	"Beep-Beep-" tone emits, that means the highest point of throttle range has been correctly confirmed	Move throttle stick to the bottom position, several "Beep-" tones emits to represent the number of Lipo battery cells	A long "Beep—" tone emits, means the lowest position of throttle range has been confirmed
---	--	--	---	---

### Program The ESC With The Transmitter

1. Enter program mode
2. Select programmable items
3. Set item's value (Programmable value)
4. Exit program mode

